

KWJ-WSN Wireless Sensors and Ethernet Gateway Quick Start Guide

Inside the Box

You should find the following items in the box:

- KWJ-WSN Wireless Sensors
- KWJ-WSN Wireless Ethernet Gateway
- Power Supply
- Antenna
- 6 ft. Ethernet Cable
- Mounting Hardware
- Quick Start Guide
- Batteries

KWJ-WSN Ethernet Gateway Quick Start


- Create a KWJ-WSN user account with assigned wireless gateways and sensors.
- Plug an Ethernet cable with internet connectivity into the gateway.
- Plug the power supply into a power outlet then connect to the gateway.
- Once all three lights turn green, your network is ready to bring sensors online.

1. Create a KWJ-WSN User Account and Setup Sensor Network

If this is your first time using the KWJ-WSN online system site, you will need to create a new account. If you have already created an account you can skip to the “Logging into the Online System” section. The following instructions will guide you through the account creation process.

1. In a web browser, navigate to <https://www.kwj-wsn.com>.

2. Click the “Get Started Here” button to create an account.

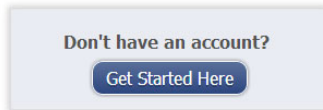

3. Follow the on-screen instructions to enter your account and contact information.

4. After entering your account and contact information, you will be prompted to create your first sensor network. Simply enter a name for this network.

5. Add the information from your KWJ-WSN gateway then click the “Assign Gateway” button.

Gateway ID  

Gateway Code  

 ID: ZTL-RFUSB1
IC: 9794A-RFUSB1

ID: #### Code: XXXXXX

6a. Add the information from your first KWJ-WSN wireless sensor then click the “Assign Sensor” button.

Sensor ID  

Sensor Code  


Contains: FCC ID: ZTL-RFSC1
IC: 9794A-RFSC1



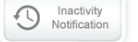

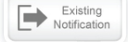
Sensor ID: #####
Sensor Code: XXXXXX

6b. On the next screen, enter a name for the wireless sensor and use the drop down to tell us how you are going to be using the wireless sensor. (This allows us to suggest settings for your sensor.) When finished, click the “Continue” button.

7. Setup sensor notification(s).

The next screen will allow you to setup notifications for the sensor that was just added to the network. You have the option of creating your own custom notification based on the classes of notifications included in the system. When you choose your own notification, it will be available for any similar sensors that are added to your account in the future.

New Notification for CO Gas - 39750

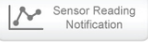 Sensor Reading Notification  Battery Notification  Inactivity Notification  Advanced Notification  Existing Notification


Select a Notification Class

Notifications assigned to CO Gas - 39750

Type	Notification Name	Last Sent	Sending To
Currently no notifications assigned			

Custom notifications


To create a custom notification, click on the appropriate class button and select the type of notification from the drop down menu. Set your custom notification settings and click “Continue”.

 Sensor Reading Notification

Notification Name

 
Notification Text

Notify when sensor value is (to)

Schedule Notification Times 

Don't Alert again for (Snooze) minutes

Notification is active ☒




8. Assign any additional sensors.

When you have finished setting up the sensor, you will see a confirmation screen. At this point you can assign additional sensors to your network or begin using the system by clicking “Done”.

2. Using the KWJ-WSN Ethernet Gateway

 1. Understanding the Ethernet Gateway Lights




Light 1 - Indicates the Ethernet cable is plugged in. A green light indicates ready and working, a red light indicates there is a problem.

Light 2 - Indicates the Ethernet has internet connectivity and can reach the online monitoring system. A green light indicates ready and working, a red light indicates there is a problem. A flashing green light indicates network traffic to the internet.

Light 3 - Indicates sensor network activity. A green light indicates ready and working, a red light indicates there is a problem. A flashing green light indicates radio traffic from the sensors.

 2. Ethernet Gateway Controls

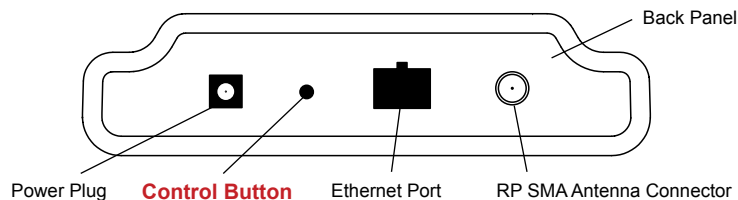

Using the Control Button:

1) A short press will trigger the gateway to immediately send all stored sensor messages to the online system and download any pending system messages to deliver to the sensors. (The default heartbeat for the Ethernet gateway is 5 minutes.)

2) Press and hold to reset the gateway to factory settings. This resets the gateway heartbeat to 5 minutes and changes the heartbeat in the online system as well. You will need to login to the online system after resetting the gateway to reconfigure the gateway to your desired settings.

Note: If your gateway powers up with the lights scrolling from left to right, it has entered into boot loader mode accidentally. Make sure the button is free from obstruction and reboot the gateway by removing the power plug, waiting for 10 seconds then reinserting the power plug.

3. Configuring The Ethernet Gateway

The Ethernet Gateway collects data from all sensors within range and is preconfigured to batch deliver the sensor messages to the online system every 5 minutes.

The Ethernet Gateway uses DHCP (Dynamic Host Configuration Protocol) to automatically acquire a network address from the LAN (Local Area Network). In the event that it needs to have an address manually assigned to it, you can assign an IP address as well as a gateway mask and default DNS through the online interface. For more information on configuring the KWJ-WSN Ethernet Gateway please view the support documentation by clicking "Support" on the main dashboard of your account.

Note: This advanced configuration is NOT required in most instances. In the event that it is required, you will need to initialize it on a network that can reach the online system with the default DHCP settings allowing your configuration settings to be downloaded to the device.

Upon logging into the online system as an administrator, select "My Account" then choose the edit icon next to your sensor network. From there you can alter the heartbeat of the Ethernet Gateway as well as edit any other configurations available. There is also a quick link to reset all gateway settings to factory defaults.

3. Using Your KWJ-WSN Wireless Sensors

Insert Batteries Into Wireless Sensors

Important: Make sure your sensors are at least 3ft. away from Ethernet Gateway.

Peel back the black sticker cover of the battery slot and slide the coin cell battery into the sensor as shown in fig. 1. It will power on within 10-20 seconds. Once online, your sensor is ready to be deployed. If you wish to change a sensor configuration, change the parameter in the software. The new parameters will be transmitted to the sensor on the next heartbeat. If you need a more immediate response from the sensor, power cycle the sensor by removing, then re-inserting the battery.

Notes:

 
- If the sensor status indicator does not change, reset the sensor by removing the battery.
- Wait 60 seconds then re-insert the battery.
- When inserting the battery, make sure to push the battery all the way back using a paper clip.
- Note the proper orientation of battery in fig. 1

Warning: Your sensors ship with a 10 minute heartbeat.

It is recommended that unless you are using the AA battery solution, you should set the heartbeat to no faster than one hour to preserve battery life. When changing a sensor's heartbeat, the new configuration information will be sent to the sensor on its next heartbeat. If you want to update the sensors immediately you can reset them manually.

Manual Sensor Reset Process:

- 1 - Using the end of a paper clip, push the batteries out of the sensors through the small hole in the top of the sensor
- 2 - Change the sensor heartbeat through the online system
- 3 - Re-insert the batteries into the sensors

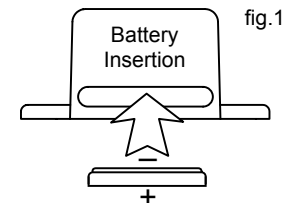

4. Using The KWJ-WSN Online Wireless Sensor System

1. Understanding The Online Interface

When you log into the online system, the default view shows all of your sensors last recorded data.

Menu System

- Overview
- Notifications
- Manage
- Reports
- Sensor Maps
- Support

View / Sort Features

Sensors Overview

Type	Sensor Name	Data	Last Check In	Signal	Battery
CO Gas	39730	0 PPM, 0 TWA-PPM, 21.6° C	8/29/2014 11:17 AM	Good	Full
CO Gas	51221	0 PPM, 0 TWA-PPM, 71.1° F	8/29/2014 11:17 AM	Good	Full

Sensor Details View

Date Range Selector

9/4/2014

Recently Sent Notifications

Date Sent	Sent To	Reading

Current Notification Settings

Type	Notification Name	Last Sent	Sending To
ON	Low Battery - CO Gas		
ON	CO > 50 ppm	8/22/2014 4:23 PM	
ON	CO > 15 ppm-TWA		
ON	CO Gas Aware State		

Menu System

- Overview** - Shows all sensors in the account and their last readings.
- Notifications** - Manage sensor notifications and show all sent notifications.
- Manage** - Manage networks, sensors and gateways.
- Reports** - Printable account and sensor network reports.
- Sensor Maps** - Visual maps to help you track sensor placement.
- Support** - Support information for using sensors and software.

View / Sort Features

This section allows you to sort the sensors being viewed and search for sensors on your account.

Sensor Overview

Displays sensors on your account with their last reading and status information. Clicking on a sensor row expands the "Sensor Detail View" allowing you to view detailed information for the selected sensor.

To the left side of each sensor row is an indicator to help you understand the current status of the sensor.

- ✓ Sensor is checking in and within user defined safe parameters.
- ! Sensor has met or exceeded a user defined threshold or triggered event.
- ? Sensor has not checked in (inactivity alert sent).
- ⏻ No sensor readings since shipping
- ✕ No sensor readings will be recorded (Inactive)
- ✎ Edit your sensor
- ✎ Edit your sensor, however some fields are unavailable until pending transactions have been downloaded to the sensor

Sensor Details View

Clicking on a sensor row on the "Overview" page expands the row to include a detailed sensor view for the selected sensor.

Select a tab to change between:


- Chart** - Displays a graphical view of the selected sensor's data.
- Notifications** - Allows you to manage notifications for the sensor.
- History** - Displays a history of the selected sensor's data.
- Export** - Allows you to archive data by exporting as a .csv file.
- Edit** - Allows you to manage sensor settings.
- Calibrate/Certificate** - Shows cal cert information/calibration information.

Note: CO sensors will arrive to you pre-calibrated, and the "Calibrate/Certificate" button will show "Certificate". User calibration is not recommended, and by default you will not have this capability. If you are having an issue, or think your sensor(s) may need to be recalibrated, please call our support line for consultation.

2. Chart and History Views.

 Clicking on the "Chart" or "History" tabs within the sensor detail panel allows you to view the sensor's data history in a graphical chart format or as text.



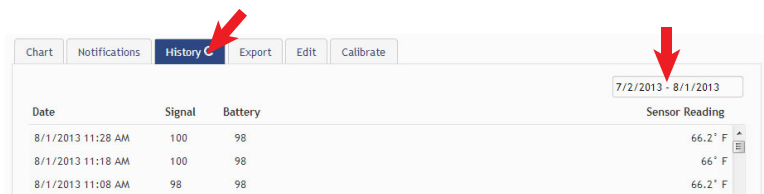


Date	Signal	Battery
8/1/2013 11:28 AM	100	98
8/1/2013 11:18 AM	100	98
8/1/2013 11:08 AM	98	98

Note: To change the date range of the viewable information, click on the date range box at the top right of the sensor detail panel.

3. Configuring Sensor Settings

 To edit a sensors operation settings, click on the sensor overview row to display the details view. Click on the “Edit” tab to access the sensor configuration panel.

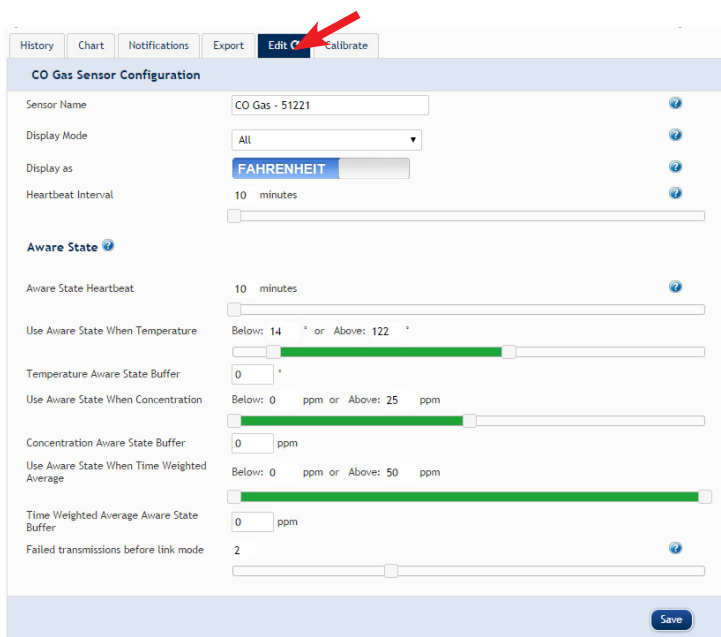

The sensor edit panel allows you to set the primary configurations for the sensor. Mousing over the question mark icon by each setting will provide an explanation of that setting. When you have finished making changes, press the “Save” button at the bottom of this section. Be sure to click the “Save” button anytime you make a change to any of the sensor parameters. All changes made to the sensor settings will be downloaded to the sensor on the next sensor heartbeat (check-in). Once a change has been made and “Saved,” you will not be able to edit that sensor’s configurations again until the sensor has downloaded the new setting

Note: Your CO sensors are preconfigured with optimal aware state settings to alert you of dangerous levels of CO with default aware notifications 50/125/400 ppm as well as over/under the operating temperature range. Because this is a **safety measure** you should not adjust these settings without first contacting KWJ Engineering.

Display Mode (Gas Sensors)

Concentration

This selection will allow the sensor to display the immediate concentration of gas the unit is sensing.

Time Weighted Average (TWA)

This selection allows the sensor to display the time weighted average concentration of gas the unit has been exposed to over an 8-hour period. This calculation is typically used by OSHA and other occupational safety professionals to maintain compliance with federal regulations in the workplace.

All

This selection allows the sensor to display both the immediate concentration of gas, and the time weighted average concentration, on your dashboard. Please note that while having this option selected will allow you to see both readings on your dashboard, you will only be able to set notifications for concentration OR TWA, not both simultaneously.

Technical Notes About Display Modes and Notifications for Gas Sensors

It is advised that you stay organized in your initial setup of your sensors, and in which display mode you want them to operate, including naming your sensors and notifications appropriately. There are some features of this system that can malfunction if your display modes and notifications do not correspond with one another.

Within this system you are able to designate certain sensors as reading “Concentration” or as reading “Time Weighted Average”. This designation, as you select in the edit screen of the sensor window, will determine how your notifications are applied. E.g. if you create a notification of CO > 25 ppm for an individual sensor, and this sensor’s display mode is set to “Time Weighted Average”, the sensor will produce the notification when the TWA reaches 25 ppm. If the sensor’s display mode is set to concentration, it will send a notification when the immediate concentration reaches 25ppm.


If you choose to change the output of the sensor from Concentration to TWA or vice versa, you **MUST** remove that sensor from it’s formerly associated notifications individually and reassign it to the new notifications. You can do this under each individual notification in the main notifications panel by clicking the “Sent From” tab, and removing/adding the sensor in question from the list. Alternatively you cannot simply “Turn Off” a notification for an individual sensor from the sensor edit notification screen. Clicking the toggle button under any individual sensors notification screen will result in that notification being turned off for your network entirely, the same as if you turned the notification on/off from the main notifications panel.

This is the reason why we recommend you are organized in naming your networks, sensors, and notifications. Create your sensor names based on location of installation, display mode, and sensor type. Create your notification names based on display mode. This way you can properly associate your sensors with their desired notifications. Examples:

CO Sensor	- Warehouse-Concentration-CO.
TWA CO Sensor	- Office-TWA-CO
Concentration Notification	- Con CO > 25 ppm
TWA Notification	- TWA CO > 9 ppm

4. Editing and Adding Notifications


Notifications for a single sensor can be created, deleted or edited by clicking the “Notifications” tab in a sensor’s detail view.

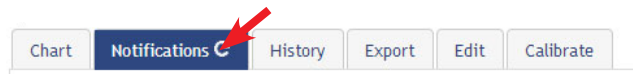

Notifications can be created, deleted or edited for any sensor or group of sensors by clicking on “Notifications” in the main menu.



 The Notification List Window

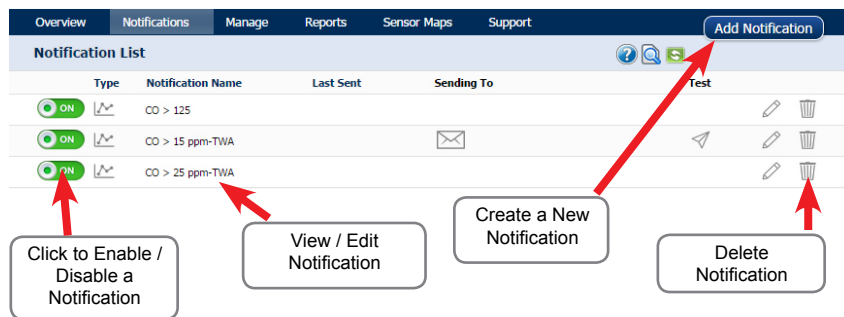

To create a new notification, click on “Add Notification”, then select the type of notification you would like to create.

Class of Notification

There are four notification options available when creating a new notification.

- **Sensor Reading** - Once you select this class, a drop down menu will appear with choices of different types of sensor readings available. These choices are dependent upon the types of sensors you have in your network, therefore certain options may not be available.
- **Inactivity** - Set-up “Inactivity” notifications to alert you when your sensors have stopped communicating with the servers. Failure to set up an “Inactivity” notification will result in no email/SMS txt being sent should your sensors stop communicating with the servers.
- **Low battery** - Allows users to define a battery power percentage level that will trigger an alert from the system, warning them to replace batteries.
- **Advanced Notifications** - Allows the user to set notifications based on more advanced rules, such as comparing past data points with the current one to determine if the notification should be sent.

Setting and Editing Notification Settings

People to Notify

Start typing a name into the box and the system will automatically populate the name of a user within your sensor network. If there are already multiple users on the network, a list of names will appear. Select the name of the user for the notification. If the person to be notified does not have an account on the network, you may quickly add them by selecting the “Add New User” link on the “My Account” page and entering in their contact information.

Notification Settings

This area allows the user to set notification parameters such as naming the notification, customizing the notification message and setting sensor conditions that will trigger the notification.


Sent From

Allows you to tell the system which sensor(s) will trigger the notification being created. When a notification is sent from the system, it will automatically include the sensor name and data that caused the notification to be sent.

A notification can be assigned to multiple sensors. Application specific notifications (ex. Carbon Monoxide) can only be assigned to sensors of that application type. General notifications such as “battery status”, can be assigned to any or all sensors.

5. Exporting Sensor Data

Clicking on the “Export” tab within the sensor data window allows you to export sensor data to a comma separated value (.csv) file or send the sensor data to an external web source.

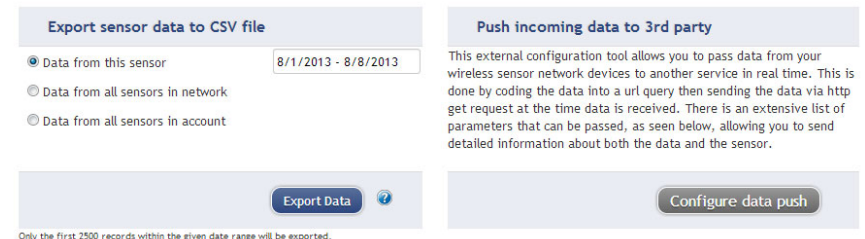

To export sensor data you must first select the date range for the data you want to export. Once the date range is selected, determine whether you want sensor data from the selected sensor only, from all sensors in the network or all sensors assigned to the account. When you are finished, click on “Export Data” at the bottom of this window. The data will be exported to a comma separated value (.csv) file format.

Note: Only the first 2,500 records within the selected date range will be exported.

You can alternately send your sensors' incoming data to a 3rd party by clicking on the “Configure data push” button at the bottom of the window. From this area you can pass data from your wireless sensor network devices to another service in real time. This is done by coding the data into a url query then sending the data via http get request at the time data is received. There is an extensive list of parameters that can be passed, as listed in the viewed window, that allow you to send detailed information about both the data and the sensor.

6. Calibrating Sensor Data

Certain wireless sensors can be calibrated for more accurate readings. If calibration is possible for a sensor, the "Calibrate" tab will be visible in the detail view. If it is not possible, the tab will show "Certificate". To calibrate a sensor, replace the last reading with the more accurate reading and click "Calibrate". All future readings from the sensor will be based off the new calibration setting. *You must call KWJ Support if you think your gas sensor needs to be calibrated.*

History Chart Notifications Export Edit **Calibrate**

Calibrate Sensor

Calibrate temperature by entering the current known temperature.
Calibrate 0 PPM by placing sensor in 0 PPM environment.
Calibrate upper span by entering the current known CO PPM concentration.

Temperature °C

Calibrate **Default**

7. Manage Sensor Networks

To view or edit information about your wireless sensor network(s), click on "Manage" in the main navigation. This area allows you to edit network details, create new sensor networks, and manage wireless gateways and sensors for your network(s).

Click to Manage

Overview Notifications **Manage** Reports Sensor Maps Support

KWJ Research Add Network KWJ Research

Network ID: 4110
Name: KWJ Research
Count of Gateways/Sensors on this Network: 3/8
Send notifications for this Network: True

Edit Network Details

Create a new network

Select which network to view

Gateway List

Name	Gateway ID	Gateway Type	Last Ch	Band	Status
USB Service - 9504	9504	USB Service	9/5/2014	900 MHz	
USB Service - 9513	9513	USB Service	8/1/2014	900 MHz	
USB Service - 9532	9532	USB Service	8/7/2014 1:00 PM	900 MHz	

Add Gateway

Add a device to the network

Sensor List

Sensor Name	Sensor ID	Sensor Type	Firmware	Status
CO Gas - 39730	39730	CO Gas	2.3.0.0	
CO Gas - 51221	51221	CO Gas		
CO Gas - 51226	51226	CO Gas		

Remove device from network

Clear sensor history and data

Move device to another network

Note: Some buttons and features are only visible if there is more than one sensor network setup on the account, such as the network selection box in the upper right corner.

If more than one sensor network is setup on the account, you can easily move gateways and sensors from one network to another by clicking on the "Move Device" button at the far right of the device's "Status" section.

If you clear a sensor's data, the data history is deleted from the entire system and can not be recovered. We recommend exporting a sensor's data history using the export function in the sensor details view ("Overview" page) before clearing the sensor's data if you want to have a record of the data.

Additional Information and Support

You can find additional information on using KWJ-WSN Wireless Sensors, including product documentation on our website at <http://www.kwjengineering.com>.

Information to Users

The KWJ-WSN wireless products referenced in this Quick Start Guide have been tested and found to comply with the standards for FCC, IC and CE certifications. For certification information on individual products please view product data sheets or product specifications on the Monnit website.



WARNING: Changes or modifications not expressly approved by KWJ Engineering Inc could void the user's authority to operate the equipment.

For additional information or more detailed instructions on how to use your KWJ-WSN Wireless Sensors or the KWJ-WSN Online System, please visit us on the web at <http://www.kwjengineering.com>, or call 1-800-472-6626.



KWJ Engineering Inc
8430 Central Ave.

Suite C
Newark, CA 94560

510-794-4296

www.kwjengineering.com